


How do the keys work?

1. **SETUP** – Programs your remote control.
2. **MASTER POWER** – Turns the selected device on or off.
3. **DEVICE BUTTONS** – Select which equipment you want to control: AUX, DVD, AUD, TV or CBL (CBL is your Click! Digital receiver).
4. **GUIDE** – Press to see the interactive guide.
5. **SETTINGS** – Press Settings once to display available interactive services.
6. **INFO** – Press to see a description of the show you're watching or to find out more about a program listing.
7. **DAY+ (OR DAY -)** – Use to move a day forward (or back) on your cable receiver's program guide.
8. **PAGE UP/PAGE DOWN** – Use to move a page up (or page down) through menu screens and the program guide.
9. **OK/SELECT** – Press to select a highlighted item such as a Video On Demand movie or a channel in the guide.
10. **EXIT** – Press at any time to return to watching TV.
11. **A, B & C BUTTONS** – These buttons are not programmed to work within our cable system.
12. **VOLUME (+ OR -)** – Press to control volume.
13. **CHANNEL (+ OR -)** – Press to change channel up or down.
14. **FAVORITE CHANNEL** – This button connects you to the main menu to activate your favorite channel list.
15. **MUTE** – Turns sound on or off.
16. **LAST** – Press to return to the previous screen or channel.
17. **ON DEMAND** – Press to enter video on demand.

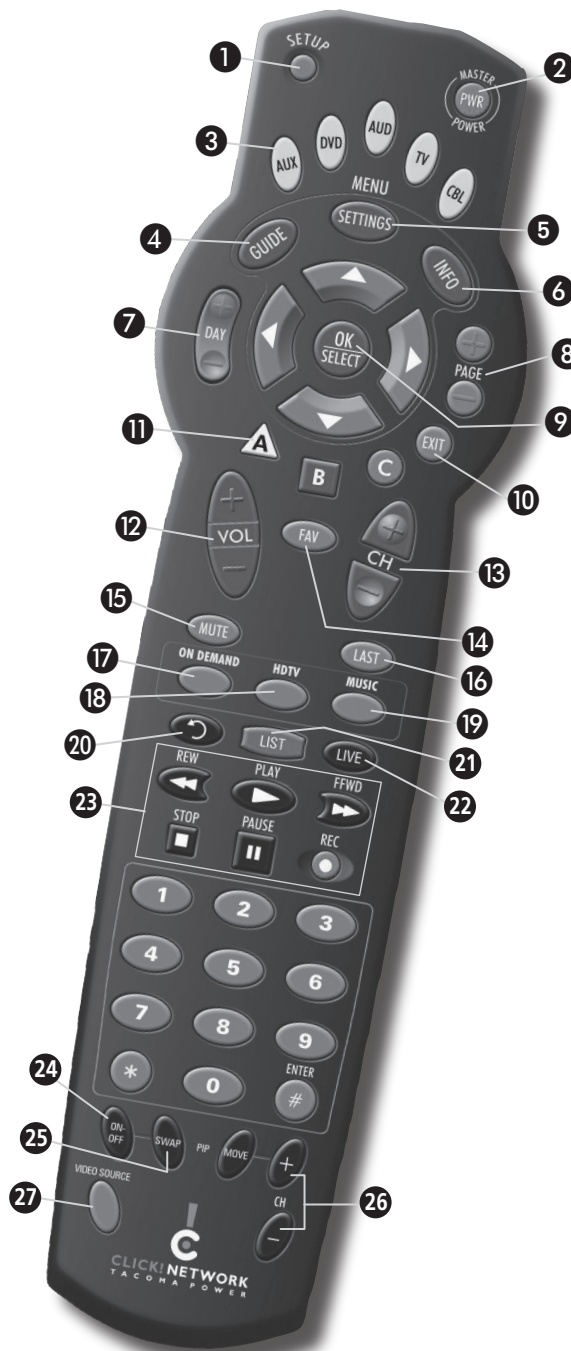

18. **HDTV** – Press to access the HDTV channel listings.
19. **MUSIC** – Press to view our digital music channel listings.
20. **INSTANT REPLAY BUTTON** – Press to command your DVR to instantly replay the last 15 seconds of a program you are watching. (This feature is only available with a DVR receiver.)
21. **LIST** – Press List once to display a list of recorded shows on your DVR.
22. **LIVE** – If you have paused using your DVR, press to return to watching live TV.
23. **REW, PLAY, FFWD, STOP, PAUSE AND REC** – Use the keys to control the DVR functions of the receiver.
24. **ON/OFF BUTTON** – These buttons are not programmed to work within our cable system.
25. **SWAP** – This allows you to change tuners on your DVR (if you have a DUAL Tuner) to watch another program during a recording or to change from current channel your viewing to switch to last channel viewed.
26. **MOVE (+) OR (-)** – These channel buttons are not programmed to work within our cable system.
27. **VIDEO SOURCE** – Use this button when the remote is in TV mode. Not all TV sets are capable of this feature. It will switch your TV to view a different piece of equipment e.g. by pressing the TV button at the top and then Video Source, your TV no longer is showing your DVR but the DVD player instead.



(253) 502-8900
www.clickcabletv.com