

The TiVo remote control

The TIVO BUTTON takes you to the TiVo Central® screen, the starting point for TiVo features and settings.

If programmed*, TV PWR turns your TV on or off.

Use INPUT to select the input (such as a DVR, DVD player, game system) your TV displays.

BACK goes back to the previous screen (in certain apps).

If programmed*, VOLUME and MUTE control the volume on your TV or AV receiver.

GUIDE takes you to the live program guide, where you can find shows to watch or record.

PLAY, PAUSE, REWIND, FAST-FORWARD or play shows in SLOW MOTION. Press Rewind and Fast-Forward up to three times for three speeds.

REPLAY repeats the last 8 seconds of the show. Press and hold to jump to the beginning of a show.

The A, B, C, and D buttons set options and sort and filter views.

CLEAR removes the display of the info banner or program guide, and deletes titles from the My Shows or To Do list.

ON DEMAND takes you to the Video On Demand catalog. (Coming Soon)

LIVE TV takes you to live TV. If you're watching live TV, use it to cycle through the tuners.

INFO shows the info banner while watching live TV; press it again to make it disappear.

Use ZOOM to change the aspect ratio of a show or return to full-screen from the Video Window.

Press SELECT to choose menu items or, when watching live TV, to bring up the mini-guide.

Use the ARROW BUTTONS to navigate the TiVo menus and the program guide.


Use the CHANNEL UP/DOWN buttons to change the channel and to page up or down while in the program guide or TiVo menus.

Use the THUMBS UP and THUMBS DOWN buttons to rate shows for TiVo Suggestions.

ADVANCE moves forward in 30-second increments; press and hold to jump to the end of the show. Or, press Advance to jump to the next tick mark when fast-forwarding or rewinding.

Press RECORD to record the show you're watching, or to set up a recording for a show selected in the guide.

ENTER/LAST returns you to the last channel tuned to in live TV.

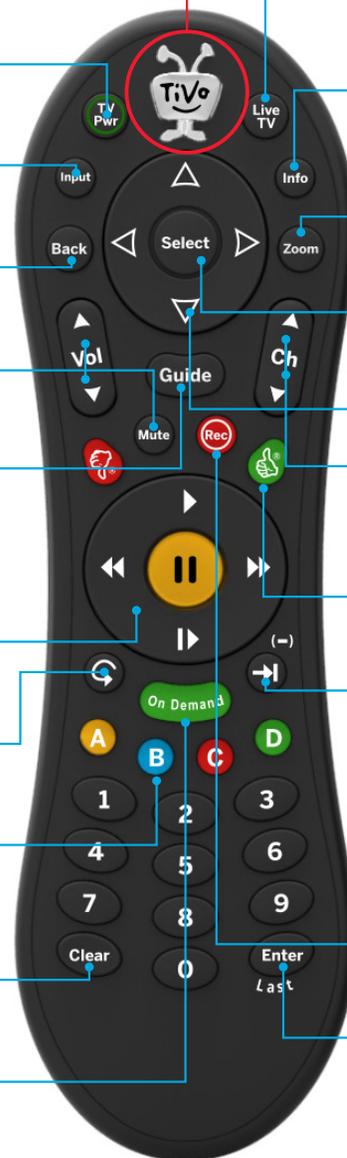

* To program your TiVo remote, press the TiVo button to go to the TiVo Central screen. Then select Settings & Messages > Settings > Remote, CableCARD, & Devices > Remote Control Setup. Follow the easy on-screen instructions.